

Electromagnetic flowmeters for water and sewage

- Primary head
- Compact flowmeters

AQUAFLUX

F

010 K

020 K

080 K



AQUAFLUX F

CONTENTS

Storage and transport

Pages 3-4

Installation in the pipeline

Pages 4-5 and 7-8

Grounding

Page 9



AQUAFLUX 010 K / 020 K



AQUAFLUX 080 K

Contents

System description	2
Product liability and warranty	2
Standards and approvals	2
Items included with supply	3
1 Important information for installation: PLEASE NOTE	4-5
2 Suggestions for installation	5
3 Instrument nameplate	6
4 Flowmeter versions	6
5 Installation in the pipeline	7
6 Torques	8
7 Grounding	9
8 Replacement of separate primary head	10
9 Technical data	10-11
10 Dimensions and weights	12-13
11 Limits	14
Printed form to accompany flowmeters returned to Krohne	15

System description

AQUAFLUX electromagnetic flowmeters are precision measuring instruments designed for the linear flow measurement of process liquids.

The process liquids must be electrically conductive: $\geq 20 \mu\text{S/cm}$

The **full-scale range $Q_{100\%}$** can be set as a function of the **meter size**:

AQUAFLUX 010 K / 020 K / 080 K: DN 10 - 1000 / $\frac{3}{8}$ " - 40" $Q_{100\%} = 0.1 - 33\,900 \text{ m}^3/\text{hr} = 0.02 - 156\,640 \text{ US GPM}$
AQUAFLUX F: DN 10 - 3000 / $\frac{3}{8}$ " - 120" $Q_{100\%} = 0.1 - 305\,000 \text{ m}^3/\text{hr} = 0.02 - 1\,400\,000 \text{ US GPM}$

This is equivalent to a flow velocity of 0.3 - 12 m/s, or 1 - 40 ft/s.

Product liability and warranty

AQUAFLUX electromagnetic flowmeters are designed solely for measuring the volumetric flowrate of electrically conductive, liquid process products.

Flowmeters with AQUAFLUX primary heads are not certified for use in hazardous locations. Other flowmeters series are available for such applications.

Responsibility as to suitability and intended use of these electromagnetic flowmeters rests solely with the operator.

Improper installation and operation of the flowmeters (systems) may lead to loss of warranty.

In addition, the "General conditions of sale" forming the basis of the purchase contract are applicable.

If AQUAFLUX flowmeters need to be returned to Krohne, please note the information given on the last-but-one page of this manual. Krohne regret that they cannot repair or check your flowmeter(s) unless accompanied by the completed form sheet.

Standards and approvals

Please refer to the installation and operating instructions for the signal converter.

Items included with supply

AQUAFLUX F primary heads

- Primary head in the size as ordered
- Connecting wires for grounding, refer to Section 7 "Grounding"
- Certificate of calibration data
- Grounding rings (optional), if ordered
- Installation instructions

AQUAFLUX 010 K, 020 K and 080 K compact flowmeters




- Compact flowmeter in the size as ordered
- Connecting wires for grounding, see Section 7 "Grounding"
- Certificate of calibration data
- Grounding rings (optional), if ordered
- Installation instructions
- Installation and operating instructions for the signal converter

Fitting accessories (stud bolts, nuts, gaskets, etc.) **are not supplied with the flowmeter, to be provided by customer!**

Handling

Do not lift flowmeter by the signal converter housing or the terminal box.

Do not set flowmeter down on signal converter housing or terminal box.

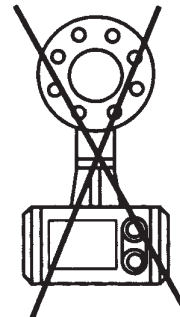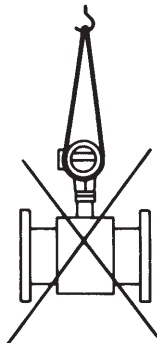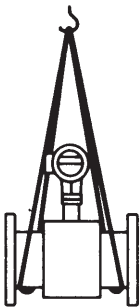

PLEASE NOTE

the temperature limits for storage and transport, see Page 4.


1 Important information for installation: PLEASE NOTE !

- Use only solventless detergents to **clean** the signal converter housing (polycarbonate).
- Temperatures**
Refer to Section 11 "Limits" for operating pressure and vacuum load based on flange standards and type of tube liner.

	Ambient temperature	Process temperature
Compact systems	-25 to +60 °C (-13 to +140 °F)	-25 to ≤ +60 °C (-13 to ≤ +140 °F)
	-25 to +40 °C (-13 to +104 °F)	-25 to ≤ +90 °C (-13 to ≤ +194 °F)
AQUAFLUX F	-25 to +60 °C (-13 to +140 °F)	-25 to > +60 °C (-13 to > +140 °F)
In storage	-20 to +60 °C (-04 to +140 °F), kept immobile, avoid moisture and sunlight.	
Transport	- 5 to +50 °C (- 4 to +140 °F), avoid moisture and sunlight.	

- Location and position as required**, but electrode axis **X - · - · - · - X** must be approximately horizontal in a horizontal pipe run.

Y terminal box or converter housing

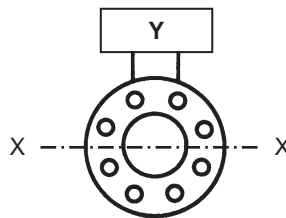


- Measuring tube must be completely filled at all times.**
- Direction of flow is arbitrary.** Arrow on flowmeter can normally be ignored. For exceptions, refer to Section "Factory settings" in the installation and operating instructions for the signal converter.
- Stud bolts and nuts:** to fit, make sure there is sufficient room next to the pipe flanges.
- Vibration:** support the pipeline on both sides of the compact flowmeter. Level of vibration in conformity with IEC 068-2-34: below 2.2g for compact flowmeters in the frequency range of 20-50 Hz with the IFC 010 K / IFC 020 K and 20-150 Hz with the IFC 090 K.
- Do not expose to direct sunlight,** fit a sunshade if necessary, not included with flowmeter, to be provided by customer.
- Large meter sizes (≥ DN 200 / ≥ 8"):** use adapter pipes to allow axial shifting of the counterflanges and to facilitate installation.

- **Strong electromagnetic fields**, avoid in vicinity of flowmeter
- **Straight inlet run minimum of $5 \times DN$ and outlet run minimum of $2 \times DN$** , (DN = meter size), measured from the electrode axis.
- **Vortex and corkscrew flow**: increase length of inlet and outlet runs or install flow conditioners.
- **Mixing different process liquids**: install flowmeter upstream of mixing point or at an adequate distance downstream (minimum of $30 \times DN$), otherwise display may be unsteady.
- **Plastic pipes and internally coated metal pipelines**: grounding rings required, see Section 7 "Grounding".
- **Insulated pipeline**: do not insulate flowmeter
- **Zero setting not necessary**. To check, it should be possible to set "zero" flow velocity in the completely filled measuring tube. Shutoff valves should therefore be provided either downstream of the flowmeter or upstream and downstream of the flowmeter.

2 Suggestions for installation


To avoid measuring errors due to gas/air inclusion or to pipe running empty, please observe the following:

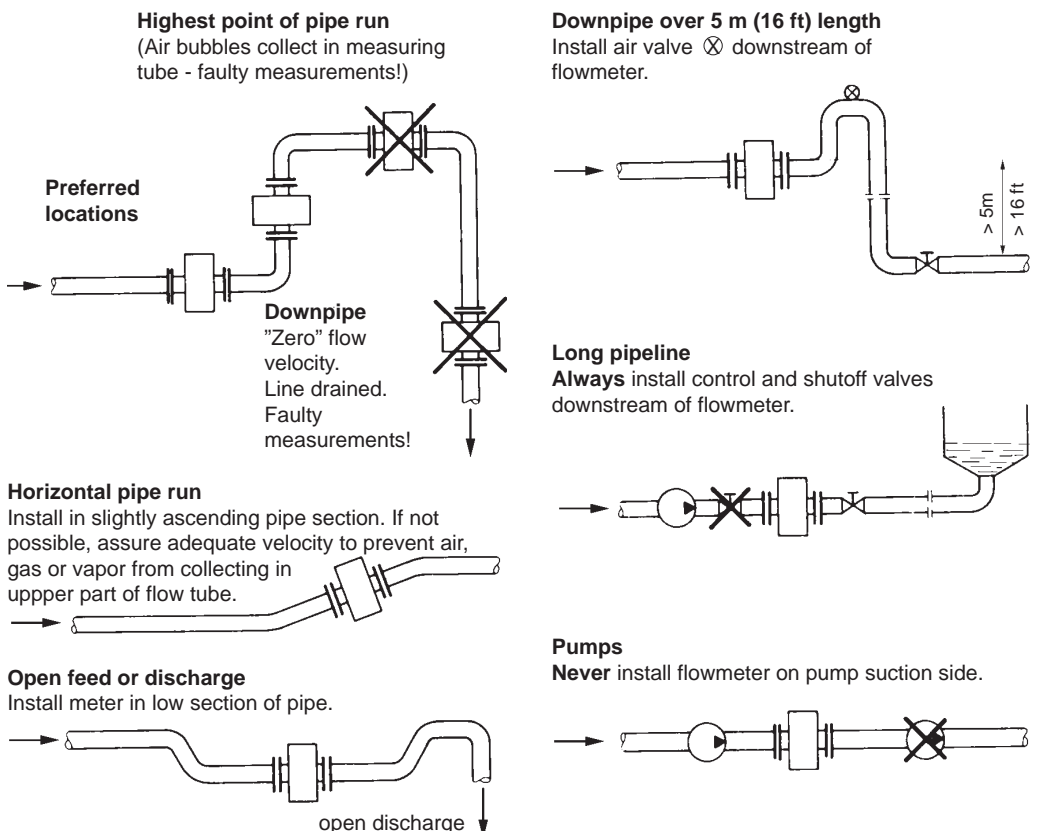

3 Instrument nameplate

AQUAFLUX F

separate primary head

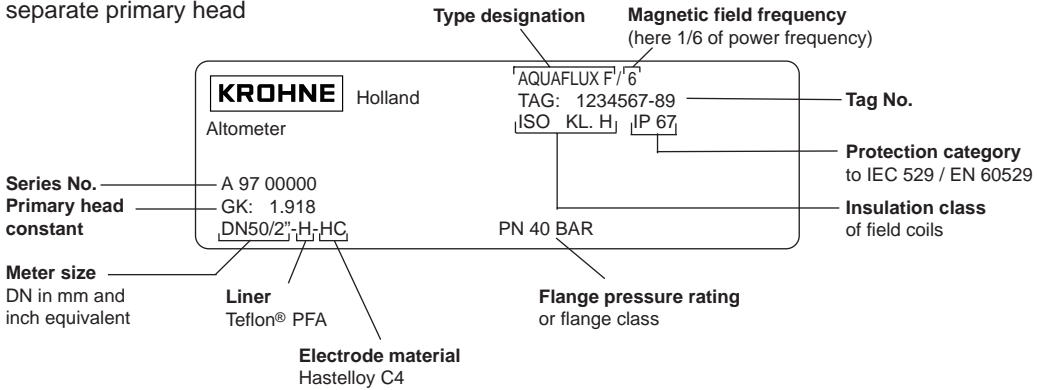

Liner materials

H	Hard rubber
T	Teflon®-PTFE

Electrode materials

HC	Hastelloy C4
TI	Titanium
V4A	Stainless steel 1.4571 / SS 316-Ti

Teflon® is a registered trademark of Du Pont

Instrument nameplate for compact flowmeters

see installation and operating instructions for the signal converter.

4 Flowmeter versions

AQUAFLUX F **Separate primary head (F)**, electrically connected to the signal converter by signal and field current cables.

AQUAFLUX 010 K, AQUAFLUX 020 K **Compact flowmeter (K)**, IFC 010 K or IFC 020 K signal converter mounted direct on the primary head.

AQUAFLUX 080 K **Compact flowmeter (K)**, IFC 090 K signal converter mounted direct on the primary head.


5 Installation in the pipeline

- **Installation material not included**, to be provided by customer (stud bolts, nuts, gaskets, etc.)
- **Pipe flanges and operating pressure:** refer to tables on "limits" in Section 11.
- **Distance between pipe flanges**
see **fitting dimension "a"**, in Section 10 "Dimensions and weights".

Position of flanges

Install flowmeter in line with the pipe axis. Pipe flange faces must be parallel to each other, max. permissible deviation:


$$L_{\max} - L_{\min} \leq 0.5 \text{ mm} \\ \leq 0.02''$$

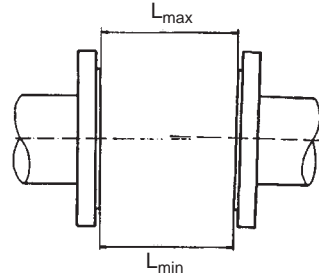

- **Hard rubber liner**
Please note the table on Page 4 for temperature limits of operation, storage and transport.
- **Teflon®-PTFE liner**
Install at the lowest point of the pipe run to avoid an excessive vacuum condition at the meter. Do not remove or damage liner, which is formed around the flange edges.
- **Gaskets**
Use gaskets suitable for the application and appropriate to the liner, not included with flowmeter, to be provided by customer.
- **Grounding rings / protective rings** (option)
On plastic pipes and internally coated metal pipelines, grounding rings must form the conductive connection with the fluid. Refer to Section 7 "Grounding for electrical connection."


Grounding ring No. 1

3 mm/0.12" thick

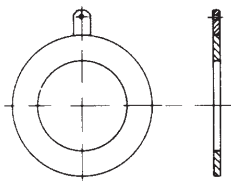


Grounding ring, protective ring No. 2

for flowmeters with Teflon®-PTFE liner, solidly fitted to the flanges, 3 mm/0.12" thick

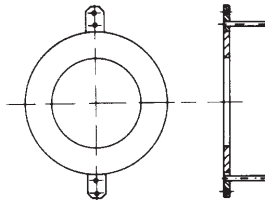

Grounding ring, protective ring No. 3

with cylindrical neck, to protect the liner particularly at the inlet edge against abrasive products, 3 mm/0.12" thick.
Length: 30 mm/1.18", for $\leq \text{DN } 300, \leq 12''$
100 mm/3.94", for $\geq \text{DN } 350, \geq 14''$

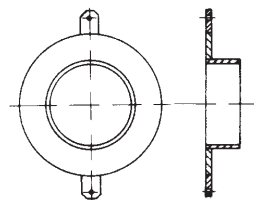

Teflon® is a registered trademark of Du Pont.

6 Torques

- Tighten **stud bolts** uniformly in diagonally opposite sequence, see table for number and type.
- **Column A**
Torques for Teflon®-PTFE liner.
- **Column B**
Torques for liner made of hard rubber.
- **10 Nm ~ 1.0 kpm ~ 7.23 ft × lbf**

Meter size DN mm	Pressure rating PN	Bolts	Max. torque Nm (ft × lbf)	
			A	B
10	40	4 × M 12	7.6 (5.5)	
15	40	4 × M 12	9.3 (6.7)	
20	40	4 × M 12	16 (11.6)	
25	40	4 × M 12		11 (8.0)
32	40	4 × M 16		19 (13.0)
40	40	4 × M 16		25 (18.1)
50	40	4 × M 16		31 (22.4)
65	16	4 × M 16		42 (30.4)
65	40	8 × M 16		21 (15.2)
80	25	8 × M 16		25 (18.1)
100	16	8 × M 16		30 (21.7)
125	16	8 × M 16		40 (28.9)
150	16	8 × M 20		47 (34.0)
200	10	8 × M 20		68 (49.2)
200	16	12 × M 20		45 (32.5)
250	10	12 × M 20		65 (47.0)
250	16	12 × M 24		78 (56.4)
300	10	12 × M 20		76 (54.9)
300	16	12 × M 24		105 (75.9)
350	10	16 × M 20		75 (54.2)
400	10	16 × M 24		104 (75.2)
450	10	20 × M 24		93 (67.2)
500	10	20 × M 24		107 (77.4)
600	10	20 × M 27		138 (99.8)
700	10	20 × M 27		163 (117.8)
800	10	24 × M 30		219 (158.3)
900	10	28 × M 30		205 (148.2)
1000	10	28 × M 35		261 (188.7)

Meter size inch	Body pressure rating lb	Bolts for ANSI class 150 flanges	Max. torque Nm (ft × lbf)	
			A	B
3/8	580	4 × 1/2"	3.5 (2.5)	
1/2	580	4 × 1/2"	3.5 (2.5)	
3/4	580	4 × 1/2"	4.8 (3.5)	
1	580	4 × 1/2"		4.4 (3.2)
1 1/2	580	4 × 1/2"		12 (8.7)
2	580	4 × 5/8"		23 (16.6)
3	360	4 × 5/8"		39 (28.2)
4	230	8 × 5/8"		31 (22.4)
6	230	8 × 3/4"		51 (36.9)
8	145	8 × 3/4"		69 (49.9)
10	145	12 × 7/8"		79 (57.1)
12	145	12 × 7/8"		104 (75.2)
14	145	12 × 1"		93 (76.2)
16	145	16 × 1"		91 (65.8)
18	145	16 × 1 1/8"		143 (103.4)
20	145	20 × 1 1/8"		127 (91.8)
24	145	20 × 1 1/4"		180 (130.1)
28	145	28 × 1 1/4"		161 (116.4)
32	145	28 × 1 1/2"		259 (187.3)
36	145	32 × 1 1/2"		269 (194.5)
40	145	36 × 1 1/2"		269 (194.5)

Note: Process pressure must not exceed ANSI flange rating. Refer to ANSI Standard B 16.5.

7 Grounding

- All flowmeters must be properly grounded to avoid personnel shock hazard.
- The ground conductor should not transmit any interference voltages, therefore do not ground any other electrical devices together with this conductor.

AQUAFLUX F separate primary head with terminal box

- An **FE functional ground** must always be connected.
- **Signal converter with field power supply > 125 mA / 60 V a PE protective conductor** must be connected to the primary head, because of the higher field current from the signal converter. See grounding diagrams below.

AQUAFLUX 010 K, 020 K and 080 K compact systems


Supply power > 50 V AC

- Grounding is via the **PE protective ground conductor** incorporated in the power supply cable, see also Section "Connection to power" in the installation and operating instructions for the signal converter.
- **EXCEPTION: Do not connect up the PE protective ground conductor in the terminal box** if e.g. compact units are operated in the proximity of electric furnaces, electrolysis plants, etc., and large potential differences occur in the pipeline system. An FE functional ground must simultaneously take over the function of the protective conductor (combined protective/functional ground). Refer to appropriate national codes for specific requirements for this type of installation, which may require the addition of a ground fault detection circuit interrupter.

Power supply 24 V AC or DC

- Protective separation (PELV) must be ensured (VDE 0100 / VDE 0106 or IEC 364 / IEC 536 or equivalent national regulations).
- An **FE functional ground conductor** must be connected for measurement reasons.

Grounding diagrams

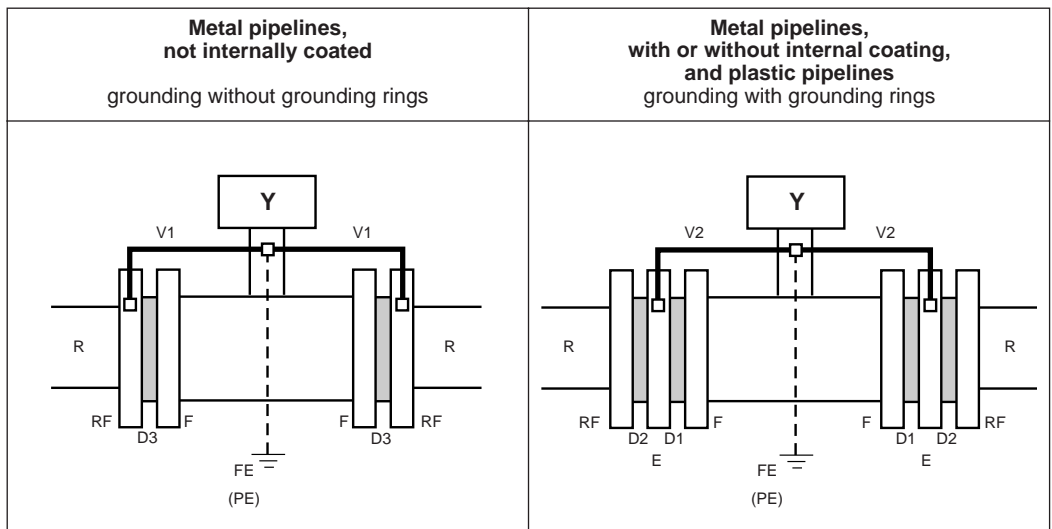

D1, D2, D3 Gaskets, not included with supply, to be provided by customer.

E Grounding rings (option)

F Flowmeter flanges

FE Functional ground, wire $\geq 4 \text{ mm}^2$ Cu (10 AWG), not included with flowmeter, to be provided by customer

PE Protective conductor required if the AQUAFLUX F is operated with a signal converter that supplies a field current of **> 125 mA / > 60 V**.
Wire $\geq 4 \text{ mm}^2$ Cu (10 AWG), not included with flowmeter, to be provided by customer.

R Pipeline

RF Pipe flanges

V1, V2 Interconnecting wires, included with flowmeter

Y Terminal box or signal converter

8 Replacement of the separate primary head

Switch off power source before commencing work !

- 1) Note down terminal assignment before dismantling the "old" primary head.
- 2) Install the new primary head as described in the supplied installation instructions.
- 3) Make electrical connection at the signal converter as described in the installation and operating instructions for the signal converter.
- 4) Specific calibration data are defined during factory calibration for each primary head, which are indicated on the instrument nameplate.
This includes the primary constant GK and the magnetic field frequency. These data need to be reset in the signal converter.
- 5) If the size of primary head is also different from the old one, the full-scale range $Q_{100\%}$ and the meter size will need to be reset.
- 6) After resetting the signal converter, carry out a zero point check.
- 7) If necessary, reset the internal electronic totalizer of the signal converter.

9 Technical data

Meter sizes

Compact systems	DN 10 – 1000 and 3/8" – 40"
AQUAFLUX F (separate)	DN 10 – 3000 and 3/8" – 120"

Pipe flanges

to DIN 2501 (= BS 4504)	DN 10 – 50 and DN 80 / PN 40 DN 65 and DN 100 – 150 / PN 16 DN 200 – 1000 / PN 10 DN 1100 – 2000 / PN 6 DN 2200 – 3000 / PN 2.5
to ANSI B 16.5 to AWWA	3/8" – 24" / Class 150 lb / RF 14" – 120" / Class B or D / FF

Electrical conductivity

≥ 20 µS/cm

Temperatures

	Ambient temperature	Process temperature
Compact systems	– 25 to + 60 °C – 13 to + 140 °F	– 5 to ≤ + 60 °C + 23 to ≤ + 140 °F
	– 25 to + 40 °C – 13 to + 104 °F	– 5 to + 90 °C + 23 to + 194 °F
AQUAFLUX F (separate)	– 25 to + 60 °C – 13 to + 140 °F	– 5 to + 90 °C + 23 to + 194 °F

Max. allowable operating data

Process temperature, operating pressure and vacuum load for the liner, refer to Page 3 "Limits"

Insulation class of field coils

E

Electrode design

DN 10 – 3000 / 3/8" – 120"	flat elliptical electrodes, solidly fitted, surface-polished
Option DN 350 – 3000 / 14" – 120"	field-replaceable electrodes WE

Protection category (EN 60 529 / IEC 529)

Standard	IP 67, equivalent to NEMA 6 (with field replaceable electrodes WE: IP 65, equivalent to NEMA 4/4X)
Option	IP 68, equivalent to NEMA 6

Grounding rings

available as an option

Materials

Measuring tube stainless steel 1.4301 (or higher materials number),
equivalent to SS 304

Liner

DN 10 – 20 / 3/8" – 3/4"	Teflon®-PTFE
DN 25 – 3000 / 1" – 120"	hard rubber

Electrodes

Standard	Hastelloy C4
Option	stainless steel 1.4571 or SS 316 Ti, titanium
Field replaceable WE	stainless steel 1.4571 or SS 316 Ti

Connecting flanges*

DIN: DN 10 – 50, DN 80 (3/8" – 2", 3") DN 65, ≥ DN 100 (≥ 4")	steel 1.0402 (C 22) or AISI C 1020 steel 1.0501 (RST 37.2) or AISI C 1035
ANSI	steel ASTM A 105 N

Housing*

DN 10 – 40 / 3/8" – 1 1/2"	GTW-S 30 (malleable cast iron)
≥ DN 50 / ≥ 2"	sheet steel

Terminal box*

AQUAFLUX F (separate) die-cast aluminium

Grounding rings (option)

stainless steel 1.4571 or SS 316 Ti

* with polyurethane coating

Teflon® is a registered trademark of Du Pont.

 
10 Dimensions and weights

PLEASE NOTE

The **total dimension for the height** is obtained from **dimension b** (see table) **plus the height** of the terminal box or the signal converter, see drawings.


The **total weight** is made up of the weight of the signal converter (see table) **plus** the weight of the terminal box or signal converter, see below.

Terminal box




Weight approx.
0.5 kg (1.1 lb)

 IFC 010 K and IFC 020 K signal converters



Weight approx.
1.6 kg (3.6 lb)

IFC 090 K signal converter

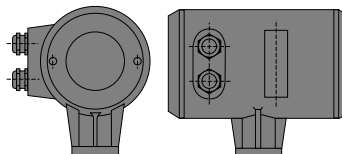

Weight approx.
2.3 kg (5.1 lb)



Flange connections to ...			Dimensions in mm (inch)
DIN 2501 (= BS 4504)	DN 10- 300	PN 40, 16, 10	see table
	DN 350-1000	PN 10	see table
	DN 350-1000	PN 25	see table, dimension "a _{standard} " + 200 mm
	≥ DN 1200	PN 6, 2.5	information supplied on request
ANSI B 16.5	3/8"-24"	150 lb / RF	see table
		≥ 300 lb / RF	dimensions supplied on request
AWWA	≥ 14"	Class B, D / FF	dimensions supplied on request

- **Dimension "a" without flange gaskets:**
not included with flowmeter, to be provided by customer.
- **Meter size 3/8":** flange connection 1/2"

Nominal size		Dimensions in mm (inch)								Approx. weight	
DIN	PN	ANSI inch	a (fitting length)			b	c	dia. D			in kg (lb)
			Standard	ISO 13359	ANSI			DIN, ISO	ANSI		
10	40	3/8	150 (5.91)	–	150 (5.91)	146 (5.75)	121 (4.76)	90 (3.54)	88.9 (3.50)	3.5 (7.7)	
15	40	1/2	150 (5.91)	200 (7.87)	150 (5.91)	146 (5.75)	121 (4.76)	95 (3.74)	88.9 (3.50)	3.5 (7.7)	
20	40	3/4	150 (5.91)	200 (7.87)	150 (5.91)	146 (5.75)	121 (4.76)	105 (4.13)	98.6 (3.88)	5.5 (12.1)	
25	40	1	150 (5.91)	200 (7.87)	150 (5.91)	146 (5.75)	121 (4.76)	115 (4.53)	108 (4.25)	5.5 (12.1)	
32	40	–	150 (5.91)	200 (7.87)	–	161 (6.34)	139 (5.47)	140 (5.51)	–	6.5 (15)	
40	40	1 1/2	150 (5.91)	200 (7.87)	150 (5.91)	161 (6.34)	139 (5.47)	150 (5.91)	127 (5.00)	6.5 (15)	
50	40	2	200 (7.87)	200 (7.87)	200 (7.87)	199 (7.83)	160 (6.30)	165 (6.50)	152 (6.00)	7.5 (17)	
65	16	–	200 (7.87)	200 (7.87)	–	209 (8.23)	173 (6.81)	185 (7.28)	–	12 (27)	
80	40	3	200 (7.87)	200 (7.87)	200 (7.87)	216 (8.50)	173 (6.81)	200 (7.87)	191 (7.50)	12 (27)	
100	16	4	250 (9.84)	250 (9.84)	250 (9.84)	267 (10.51)	233 (9.17)	220 (8.66)	228 (8.98)	14 (31)	
125	16	–	250 (9.84)	250 (9.84)	–	278 (10.94)	233 (9.17)	250 (9.84)	–	19 (42)	
150	16	6	300 (11.81)	300 (11.81)	300 (11.81)	308 (12.13)	257 (10.12)	285 (11.22)	279 (10.98)	22 (49)	
200	10/16	8	350 (13.78)	350 (13.78)	350 (13.78)	366 (14.41)	291 (11.46)	340 (13.39)	343 (13.50)	45 (100)	
250	10/16	10	400 (15.75)	450 (17.72)	400 (15.75)	418 (16.46)	331 (13.03)	395 (15.55)	406 (16.00)	65 (144)	
300	10/16	12	500 (19.69)	500 (19.69)	500 (19.69)	481 (18.94)	381 (15.00)	445 (17.52)	533 (21.00)	95 (210)	
350	10/16	14	500 (19.69)	550 (21.65)	700 (27.56)	529 (20.83)	428 (16.85)	505 (19.88)	597 (23.50)	135 (298)	
400	10/16	16	600 (23.62)	600 (23.62)	800 (31.50)	587 (23.11)	483 (19.02)	565 (22.24)	635 (25.00)	170 (375)	
500	10/16	20	600 (23.62)	–	800 (31.50)	632 (24.88)	533 (20.98)	670 (26.38)	699 (27.50)	230 (508)	
600	10/16	24	600 (23.62)	–	800 (31.50)	801 (31.54)	585 (23.03)	780 (30.71)	813 (32.00)	315 (695)	
700	10/16	28	700 (27.56)	–	flanges to AWWA,	918 (36.14)	694 (27.32)	895 (35.24)	flanges to AWWA,	255 (565)*	
800	10/16	32	800 (31.50)	–	dimensions	1039 (40.91)	922 (36.30)	1015 (39.96)	dimensions	335 (740)*	
900	10/16	36	900 (35.43)	–	on request	1145 (45.08)	1026 (40.39)	1115 (43.90)	on request	435 (960)*	
1000	10/16	40	1000 (39.37)	–		1259 (49.57)	1132 (44.57)	1230 (48.43)		520 (1150)*	

* weight with DIN flanges

DN 10 - 40 / 3/8" - 1 1/2"

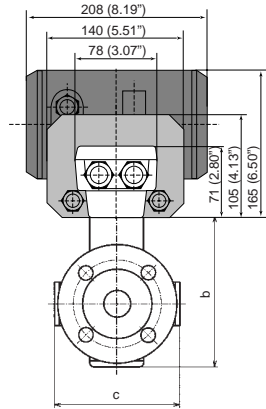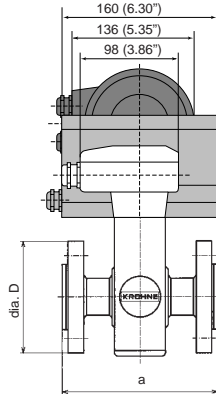

**Tolerance details
for fitting length dimension "a"**



to DIN 2501 and ANSI B 16.5

DN ≤ 300 / ≤ 12": ± 0.5 %, min. ± 1 mm / ± 0.04"
DN ≥ 350 / ≥ 14": ± 0.5 %



to ISO DIS 13 359

DN ≤ 200 / ≤ 8": +0 / -3
DN ≥ 250 / ≥ 10": +0 / -5

DN 50 - 300 / 2" - 12"

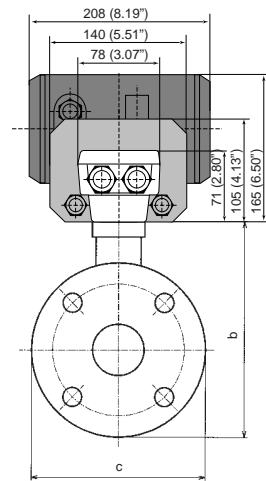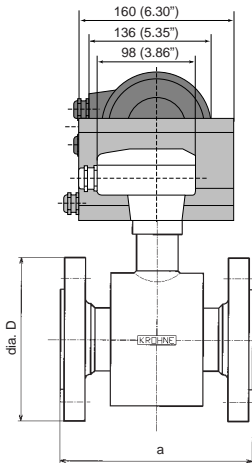

DN 350 - 2000 / 14" - 80"

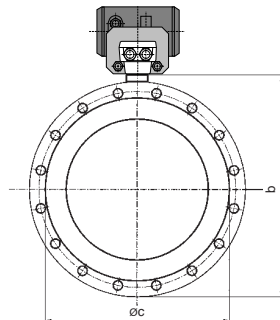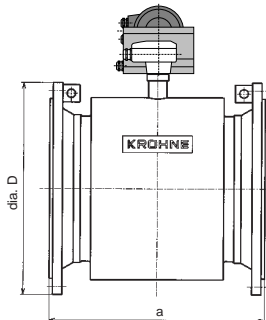

11 Limits

PLEASE NOTE!

- The limits specified in the table for process temperature and operating pressure make allowance for the tube liner and the flange standard. Refer also to the footnotes.
- At ambient temperatures of **+40 to +60 °C** or **+104 to +140 °F** the **product temperature may not be higher than +60 °C** or **+140 °F**.

Limits for pressure and temperature

Liner	Connection flange				Max. operating pressure in bar (psig) at product temperature of ...			
	Meter size	Flange standard	Pressure rating or flange class	S = Standard O = Option	at product temperature of ...			
					≤ 20 °C (≤ 68 °F)	≤ 40 °C (≤ 105 °F)	≤ 60 °C (≤ 140 °F)	≤ 90 °C (≤ 194 °F)
PTFE	DN 10 – 20	DIN 2501	PN 40	S	40 (580)	40 (580)	40 (580)	40 (580)
	3/8" – 3/4"	ANSI B 16.5	150 lb 300 lb	S O	19.0* (275)* 40 (580)	18.9* (274)* 40 (580)	17.9* (259)* 40 (580)	17.1* (248)* 40 (580)
Hard rubber	DN 25 – 50, DN 80	DIN 2501	PN 40	S	40 (580)	40 (580)	40 (580)	40 (580)
	DN 65, DN 100 – 150	DIN 2501	PN 16	S	16 (230)	16 (230)	16 (230)	16 (230)
			PN 40	O	40 (580)	40 (580)	40 (580)	40 (580)
	DN 200 – 600	DIN 2501	PN 10	S	10 (150)	10 (150)	10 (150)	10 (150)
			PN 16	O	16 (230)	16 (230)	16 (230)	16 (230)
			PN 25	O	25 (360)	25 (360)	25 (360)	25 (360)
	DN 700 – 1000	DIN 2501	PN 10	S	<10** (<150)**	<9.9** (<144)**	<9.5** (<138)**	on request
PN 16			O	<13.8*** (<200)***	<128*** (<185)***	<12.5*** (<181)***	on request	
≥ DN 1200	DIN 2501	PN 6/2.5	S/O	on request	on request	on request	on request	
1" – 40"	ANSI B 16.5	150 lb 300 lb	S O	19.0* (275)* 40 (580)	18.9* (274)* 40 (580)	17.9* (259)* 40 (580)	17.1* (248)* 40 (580)	
≥ 14"	AWWA	B D	S O	6 (90) 10 (150)	6 (90) 10 (150)	6 (90) 10 (150)	6 (90) 10 (150)	

* with gaskets made of Neoprene or similar material

** dependent on meter size

*** with gaskets made of Neoprene or similar material, dependent on meter size.

Note: Calculated operating pressures to DIN 2505 are much lower than the values in the table above.

Vacuum load

Liner	Meter size		Max. allowed vacuum load in mbar abs. (psia) at product temperature of ...			
	DN mm	inch	at product temperature of ...			
			≤ 20 °C (≤ 68 °F)	≤ 40 °C (≤ 105 °F)	≤ 60 °C (≤ 140 °F)	≤ 80 °C (≤ 176 °F)
PTFE	DN 10 – 20	3/8" – 3/4"	0 (0)	0 (0)	0 (0)	0 (0)
Hard rubber	DN 25 – 300	1 – 12	250 (3.6)	250 (3.6)	400 (5.8)	400 (5.8)
	DN 350 – 1000	14 – 40	500 (7.3)	500 (7.3)	600 (8.7)	600 (8.7)
	≥ DN 1200	≥ 48"	on request	on request	on request	on request

If you need to return flowmeters for testing or repair to Krohne

Your electromagnetic flowmeter

- has been carefully manufactured and tested by a company with ISO 9001 certification
- and volumetrically calibrated in one of the world's most accurate test rigs.

If installed and operated in accordance with these operating instructions, your flowmeter will rarely present any problems.

Should you nevertheless need to return a flowmeter for checkout or repair, please pay strict attention to the following points:

Due to statutory regulations concerning protection of the environment and the health and safety of our personnel, Krohne may only handle, test and repair returned flowmeters that have been in contact with liquids if it is possible to do so without risk to personnel and environment. This means that Krohne can only service your flowmeter if it is accompanied

by a certificate in line with the following model confirming that the flowmeter is safe to handle.

If the flowmeter has been operated with toxic, caustic, flammable or water-endangering liquids, you are kindly requested

- to check and ensure, if necessary by rinsing or neutralizing, that all cavities in the flowmeter are free from such dangerous substances.
(Directions on how you can find out whether the primary head has to be opened and then flushed out or neutralized are obtainable from Krohne on request.)
- to enclose a certificate with the flowmeter confirming that the flowmeter is safe to handle and stating the liquid used.

Krohne regret that they cannot service your flowmeter unless accompanied by such a certificate.

SPECIMEN certificate

Company:

Address:

Department:

Name:

Tel. No.:

The enclosed electromagnetic flowmeter

Type:

Krohne Order No. or Series No.:

has been operated with the following liquid:

Because this liquid is

water-endangering * / toxic * / caustic * / flammable *

we have

– checked that all cavities in the flowmeter are free from such substances *

– flushed out and neutralized all cavities in the flowmeter *

(* delete if not applicable)

We confirm that there is no risk to man or environment through any residual liquid contained in this flowmeter.

Date: Signature:

Company stamp: